

How to print on disc hub with Prism Printer

There is a file called std120.bmp that has been filled with black. Where ever the black fill is where you are allowed to print using a Prism Printer.

The std120.bmp file is located in:

C:\Winnt\system32\spool\drivers\w32x86\3\

All you have to do is edit the .bmp file using a graphics program and fill with black where you want to print. All you have to do is put the file in the above directory and rename it std120.bmp. Here is a link to download [3 bitmaps](#) already edited. These include a .bmp to print on hub only, 1 to print on the complete disc including the hub, and the standard one that does not allow for hub printing.

Please note: that printing on hub can ruin the print heads on discs that have stacking rings and that's why Rimage does not recommend this.