


## Tracer 3+ Roller Cleaning Instructions


(Required maintenance to prevent diskette jamming in loader)

(Tools required – Hand towel, Isopropyl Alcohol (IPA) or Windex, Philips Screwdriver)


- 1.) Remove Back Cover from Tracer 3+ by loosening thumb screw.
- 2.) Remove Front Cover by removing two Philips screws. Covers slides back and up.
- 3.) Power Loader On.
- 4.) On left side of loader turn Dial Switch to 5 and press the Push Button. This will spin the rollers.

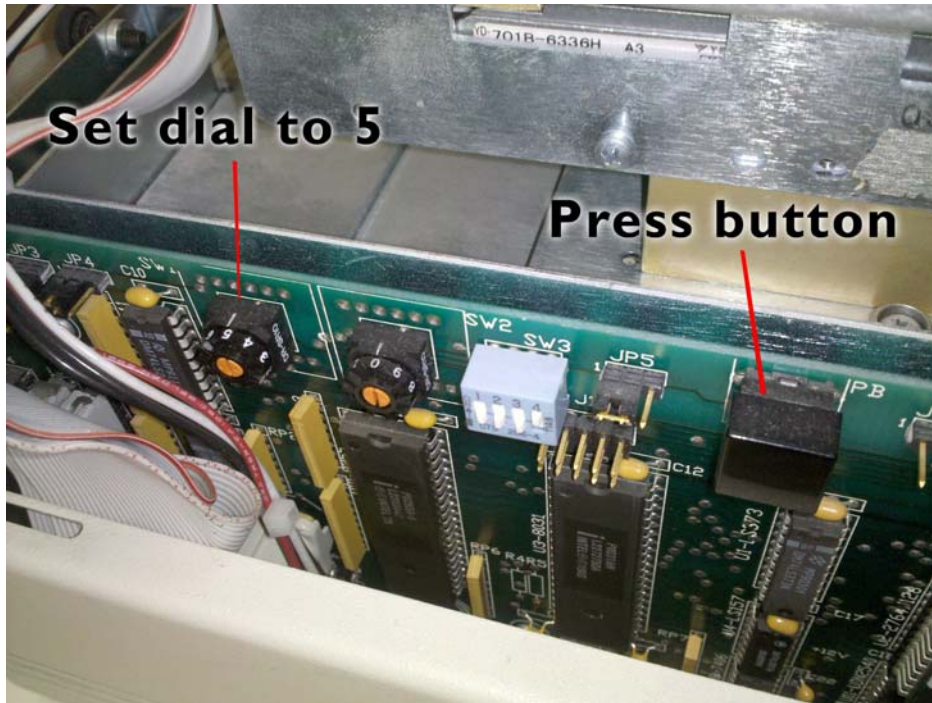

While rollers are spinning, use hand towel wet with IPA or Windex and put pressure on roller while spinning.

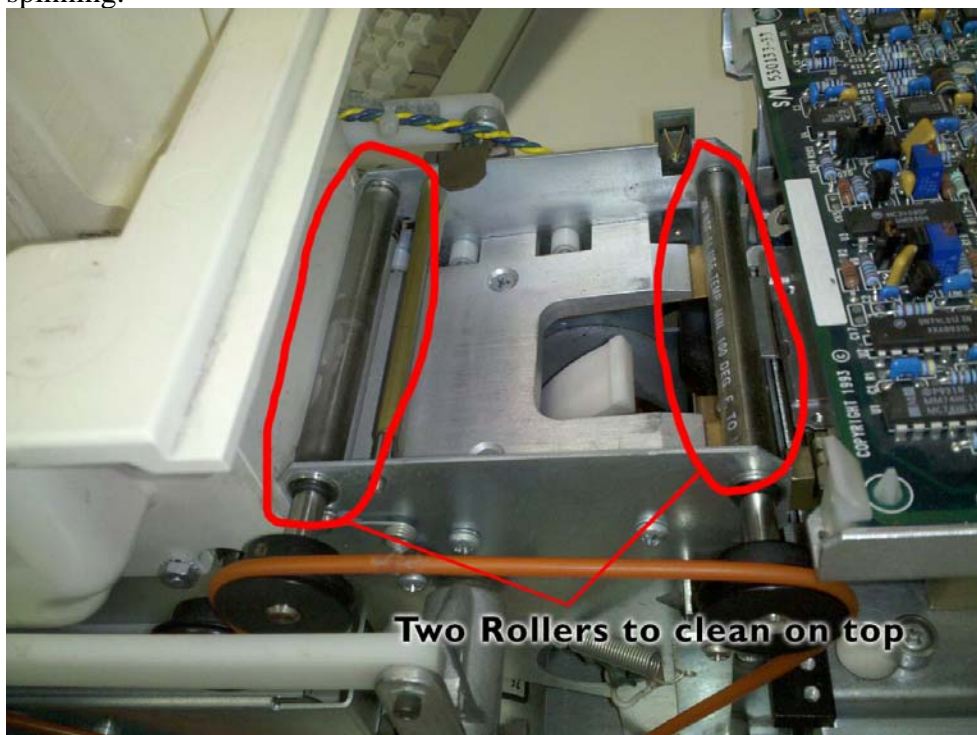

This will clean the roller. Repeat this process for all 4 rollers. Turn loader on side to access 2 bottom rollers.

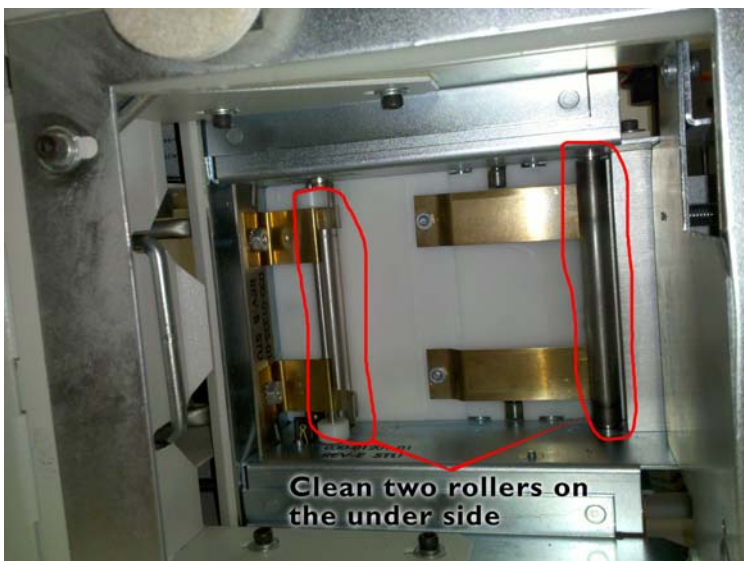

Press Push button again to stop rollers from spinning.

