

Tracer/ST Loader (Roller) Cleaning Instructions

(Required maintenance to prevent diskette jamming in loader)


(Tools required – Hand Towel, Isopropyl Alcohol (IPA) or Windex, Philips Screwdriver)

(Frequency – Every 2,500 disk insertions the message “Warning Perform Loader Maintenance” will appear until the cleaning is performed. The cleaning counter is reset to 0 upon completion of cleaning)


- 1.) Remove Back Cover from Tracer/ST by loosening thumb screw
- 2.) Remove Front Cover by removing two Philips Screws. Cover slide back and up.
- 3.) Power Loader On.
- 4.) From Menu Select – OPTION, UTILITY, CLEAN, LOADER. This will spin the disk transport rollers.




While rollers are spinning, use hand towel wet with IPA or Windex and put pressure on roller while spinning

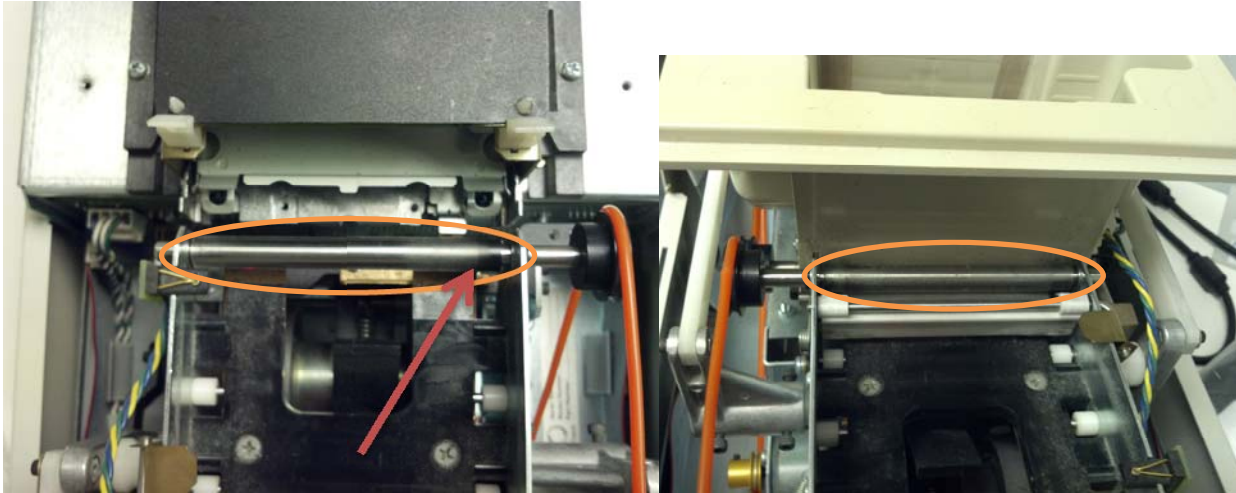

Notice in picture above left side of roller is clean and right side is black. Clean roller until it is completely clear. (no black).

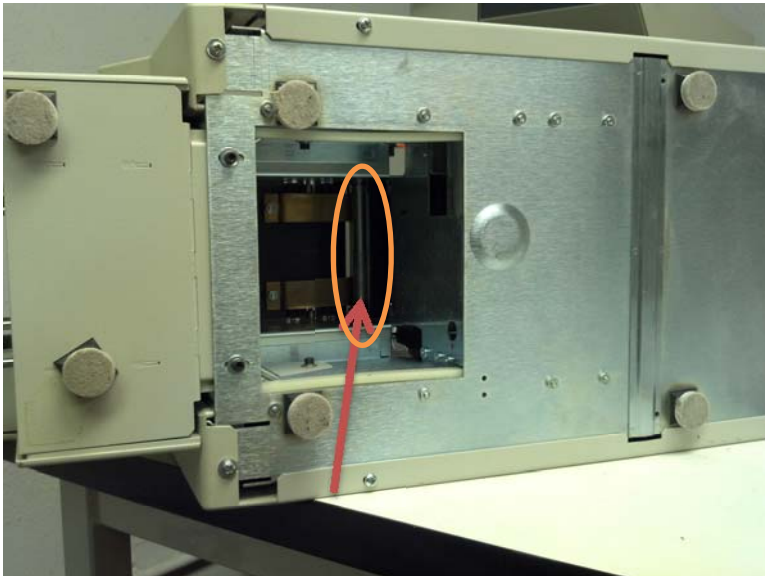

After cleaning the top two rollers turn loader on its side while the rollers are still spinning and clean the bottom two rollers. 4 Rollers total.

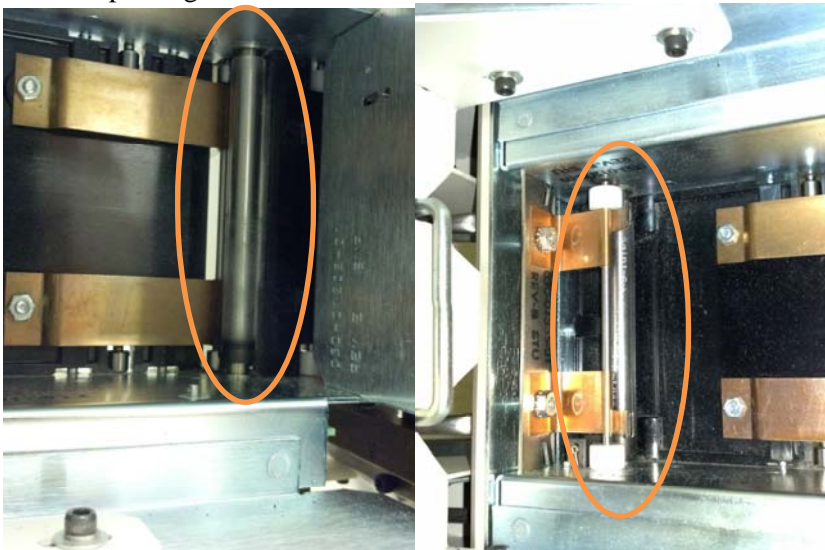

Turn loader back over and press any key to stop cleaning.